



# User Manual




• 1435-1

# RAM DT 12inch

## Mode Change and Operation




### Activation:

-  Long press:  
Activate video sources
-  Double Press:  
Move the camera image from the top of screen to the bottom
-  Short press:  
Return to OEM Display

## Caravan Camera RTC Function

In order to override the factory reverse camera with an auxiliary camera (Caravan/Trailer) the RTC function needs to be activated by following the below steps:

1. Put the vehicle in reverse
2. Long press "Browse/Tune" button
3. This will switch from the factory camera screen to the auxiliary camera
4. Repeat this process to change the default back to the factory camera

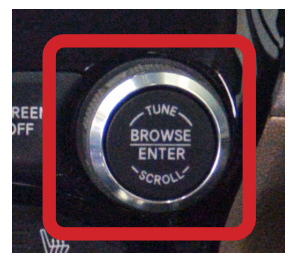






# RAM DT 8.4inch

## Mode Change and Operation




### Activation of Video Sources:

-  Long press:  
Activate video sources
-  Long press (when Navigation on screen)\*:  
Activate/deactivate PIP Mode
-  Short press:  
Return to OEM Display

## Caravan Camera RTC Function

*In order to override the factory reverse camera with an auxiliary camera (Caravan/Trailer) the RTC function needs to be activated by following the below steps:*

1. Put the vehicle in reverse
2. Long press "Browse/Tune" button
3. This will switch from the factory camera screen to the auxiliary camera
4. Repeat this process to change the default back to the factory camera

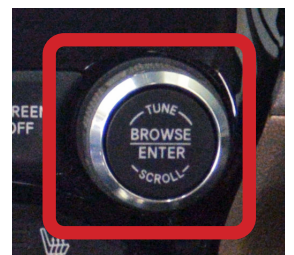

**\*Please Note: When long pressing Browse/Tune button, this may activate other functions when using Android Auto**