



User Manual

- 1409-2
- 1409-3



Figure 1

Activation of video sources:



Long press to activate video sources



Return to OEM Display

Activation/Deactivation of Caravan Camera in Reverse

To Activate the Caravan Camera:

- Turn the car on and wait for the system to boot up.
- Put the vehicle in Reverse gear. The system should default to the factory Reverse Camera.
- While in Reverse, long press the NAV button for 4 seconds.

To Deactivate the Caravan Camera:

- Turn the car on and wait for the system to boot up.
- Put the vehicle in Reverse gear. The system should display the Caravan Camera.
- While in Reverse, long press the NAV button for 4 seconds. This will automatically change back to the Navigation Screen.
- Take the vehicle out of reverse gear, e.g. put in Park. The system should now default back to the reverse camera.

Watch a video of how to activate/deactivate:



Figure 2



Figure 3

FOR ALL VEHICLES WITH 360 DEGREE CAMERA

When using the RTC Function (Caravan Camera Override of the vehicle's factory reverse camera), it is important to first deactivate any of the vehicle's factory cameras that are set to **AUTO**.

If one or more of the camera views are set to **AUTO**, this will result in strange camera functionality when moving through the gears.

To deactivate the **AUTO** function, you can press the **VIEW** button (Figure 5) behind the left side of the steering wheel. Ensure that the **AUTO** icon at the bottom right of the touch screen on both camera screens is off as shown (Figure 6).

Activation/Deactivation of PIP mode for Caravan Camera

Activation of PIP for single Caravan Camera (AV1 only):



-  Activation: Long Press of Hang Up button on SWC
-  Deactivation: Long Press of Hang Up button on SWC



Figure 4

Activation of PIP for dual Camera setup (AV1 & AV2):




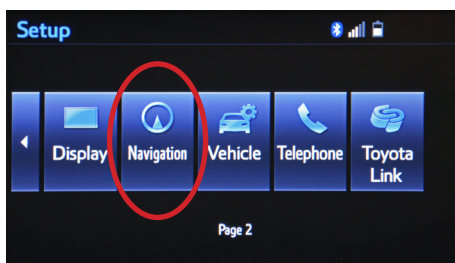
-  1st Long Press of Hang Up button on SWC:
Activates AV1
-  2nd Long Press of Hang Up button on SWC:
Activates AV2
-  3rd Long Press of Hang Up button on SWC:
Deactivates PIP mode.




Figure 5

How to Calibrate the Factory Navigation




Step 1:

Access the *Setup* menu and select the *Navigation* option on page 2 of the *Setup* menu.

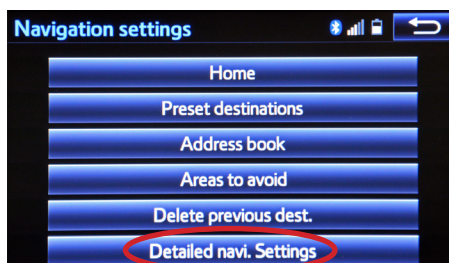

Step 2:

Select the *Detailed navi. Settings* option of the *Navigation Settings* page.

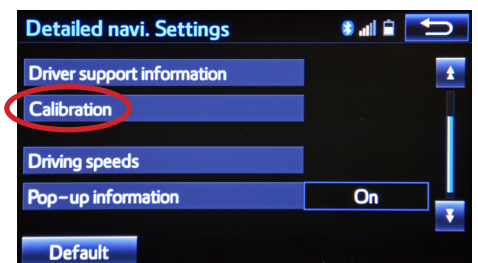

Step 3:

Towards the bottom of the *Detailed navi. Settings* menu, click on the *Calibration* option to calibrate device.