 


Avalon 10X10 Gazebo Instruction Manual

Item #: L-GZ816PST

SKU #: 810213581

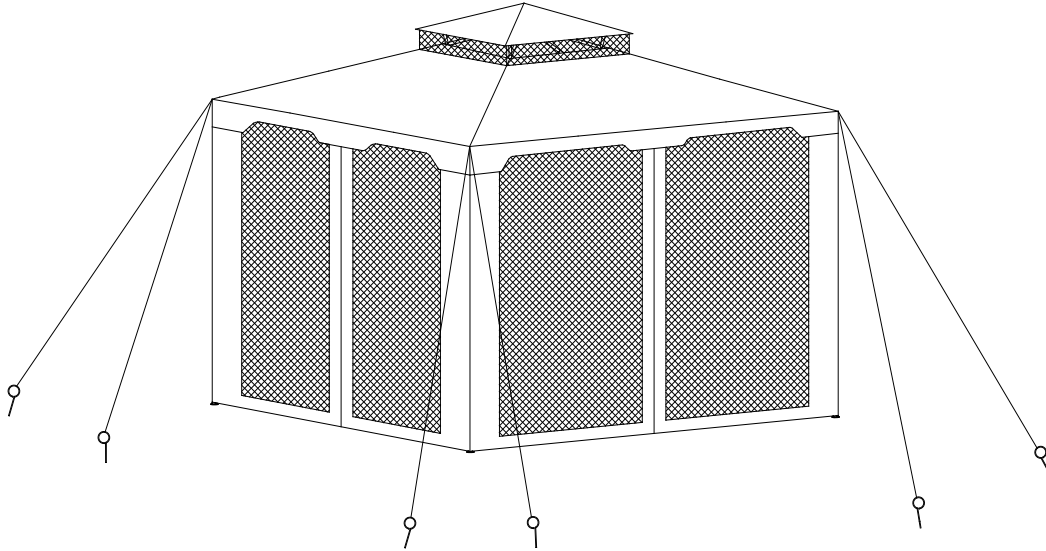

IMPORTANT:

Please read and follow all safety statements, warnings, assembly instructions, use & care directions before attempting to assemble.

WARNING:






 

 

1. When installing and assembling your gazebo, it is recommended that 2 or more adults are involved.
2. This product is intended for outdoor use only and should be placed on flat, horizontal ground.
3. Ensure enough clearance around the product.
4. Do not use the unit during an electrical storm, as there is a remote chance of getting struck by lightning.
5. Do not climb on top of the gazebo. Falling off the gazebo can result in serious injury, possibly even death.
6. Never barbecue under this gazebo or use lanterns that contain naked flames.


 
 


 

7. This package contains small items and plastic bags that should be kept away from children.
8. Ensure that all connectors & poles are firmly secured in position fully. It is important to do so before use so as to avoid collapsing or damage to the item, which could result in injury.
9. WARNING: Keep all flame and heat sources away from this gazebo fabric. This gazebo is made with fabric that meets CPAI – 84 specifications for flame resistance. It is not fire proof. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the gazebo fabric may render the Flame-resistant properties ineffective.
10. WARNING: Please take down the gazebo during strong wind. The manufacturer or retailer is not liable for any loss of the product or other items due to the failure to take down the gazebo during strong wind.
11. Hook maximum weight: 26 lbs.

PREPARATION:

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list. If any part is missing or damaged, do not attempt to assemble the product.

Parts List

1	Upper post	4	
2	Down post	4	
3	Long support pipe	8	
4	Short support pipe	4	
5	Top short pipe	4	
6	Top long pipe	4	
A	Base	4	
B	Pipe connector	4	
C	Big top connector	1	

D	Small canopy	1	
E	Big canopy	1	
F	Mosquito netting	1	
AA	∅ 4 x180 Stake TBZ10706180HQ	8PCS	
BB	Rope	8PCS	
CC	Big stake	8PCS	
DD	Ring	48PCS	

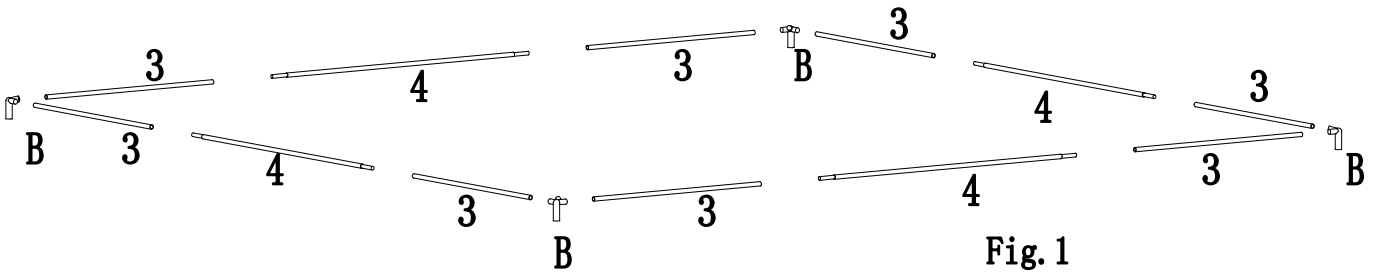 


Fig. 1

Fig.1: Insert both ends of short support pipe (4) into long support pipe (3), then insert another end of long support pipe (3) into pipe connector (B), with gradient circular tube upwards.

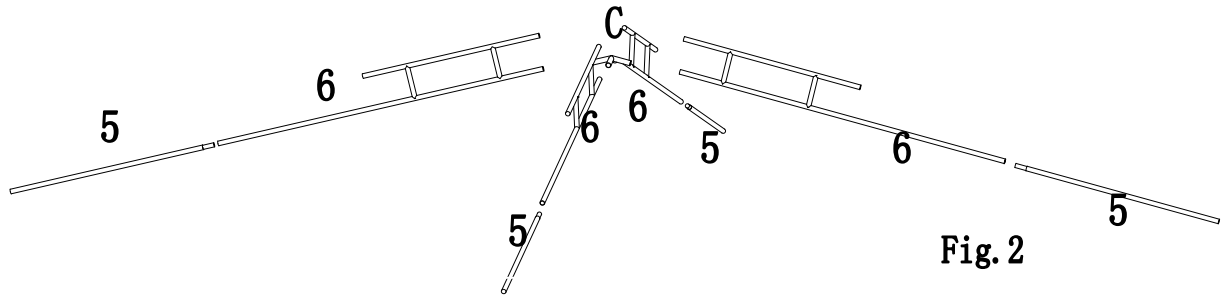 


Fig. 2

Fig.2: Insert one end with contracted pipe of top short pipe (5) into top long pipe (6), then insert top long pipe (6) into big top connector (C), put big canopy (E) onto frame before installing fourth top long pipe (6), do not spread out. Insert fourth top long pipe (6) into big top connector (C). (See next step diagram)

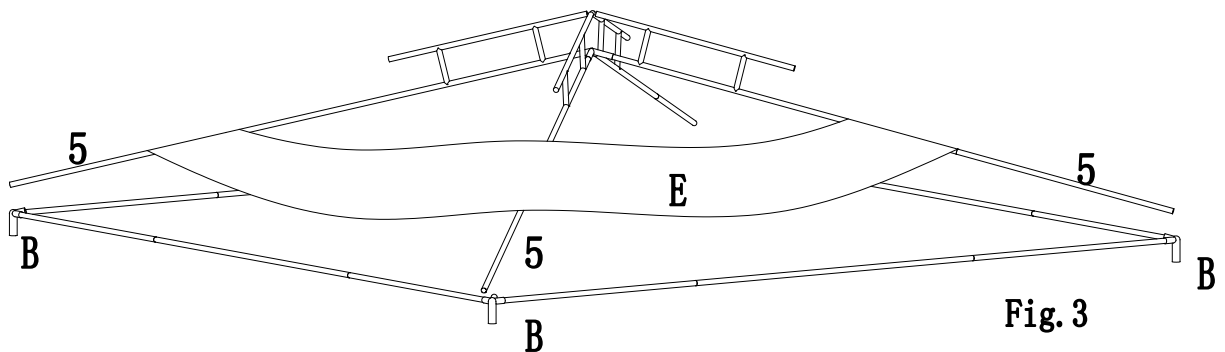 


Fig. 3

Fig.3: Insert another end of top short pipe (5) into pipe connector (B). Put small canopy (D). (See next step diagram)

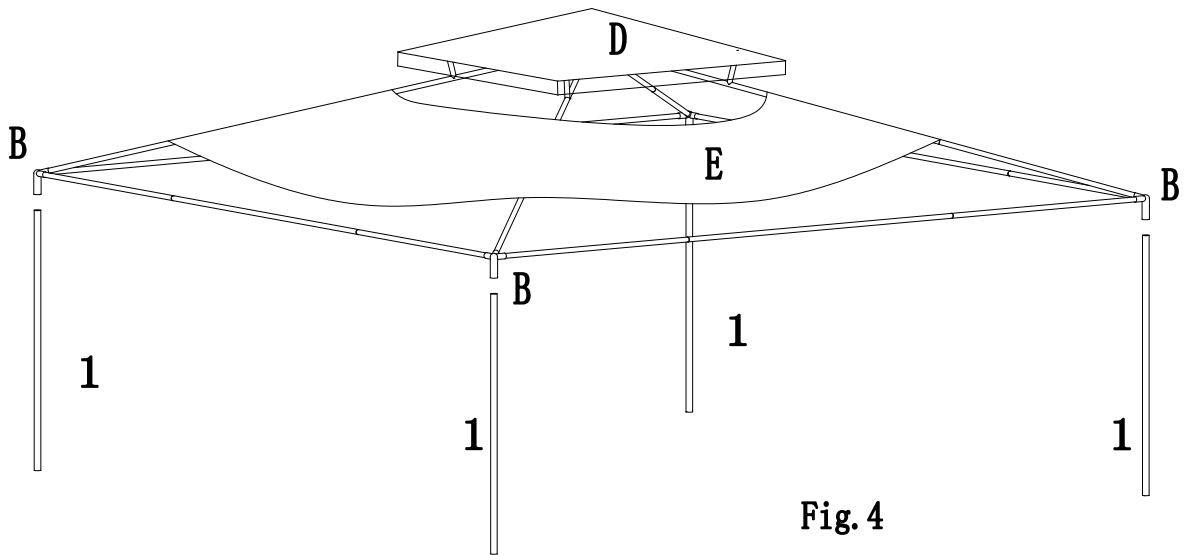 


Fig. 4

Fig.4: Insert one end with spring fastener of upper post (1) into pipe connector (B).

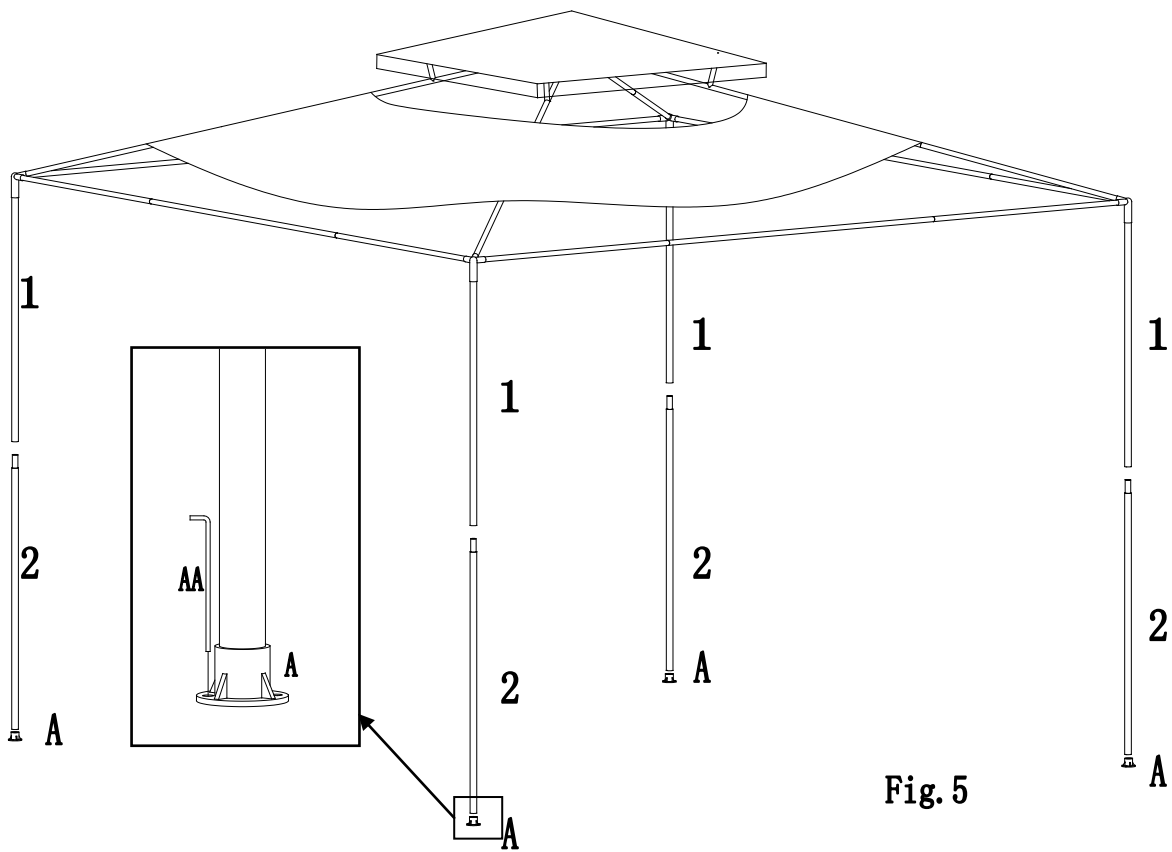 


Fig. 5

Fig5: Insert one end with contracted pipe of down post (2) into upper post (1), insert another end of down post (2) into base (A). Secure whole gazebo with stake (AA).

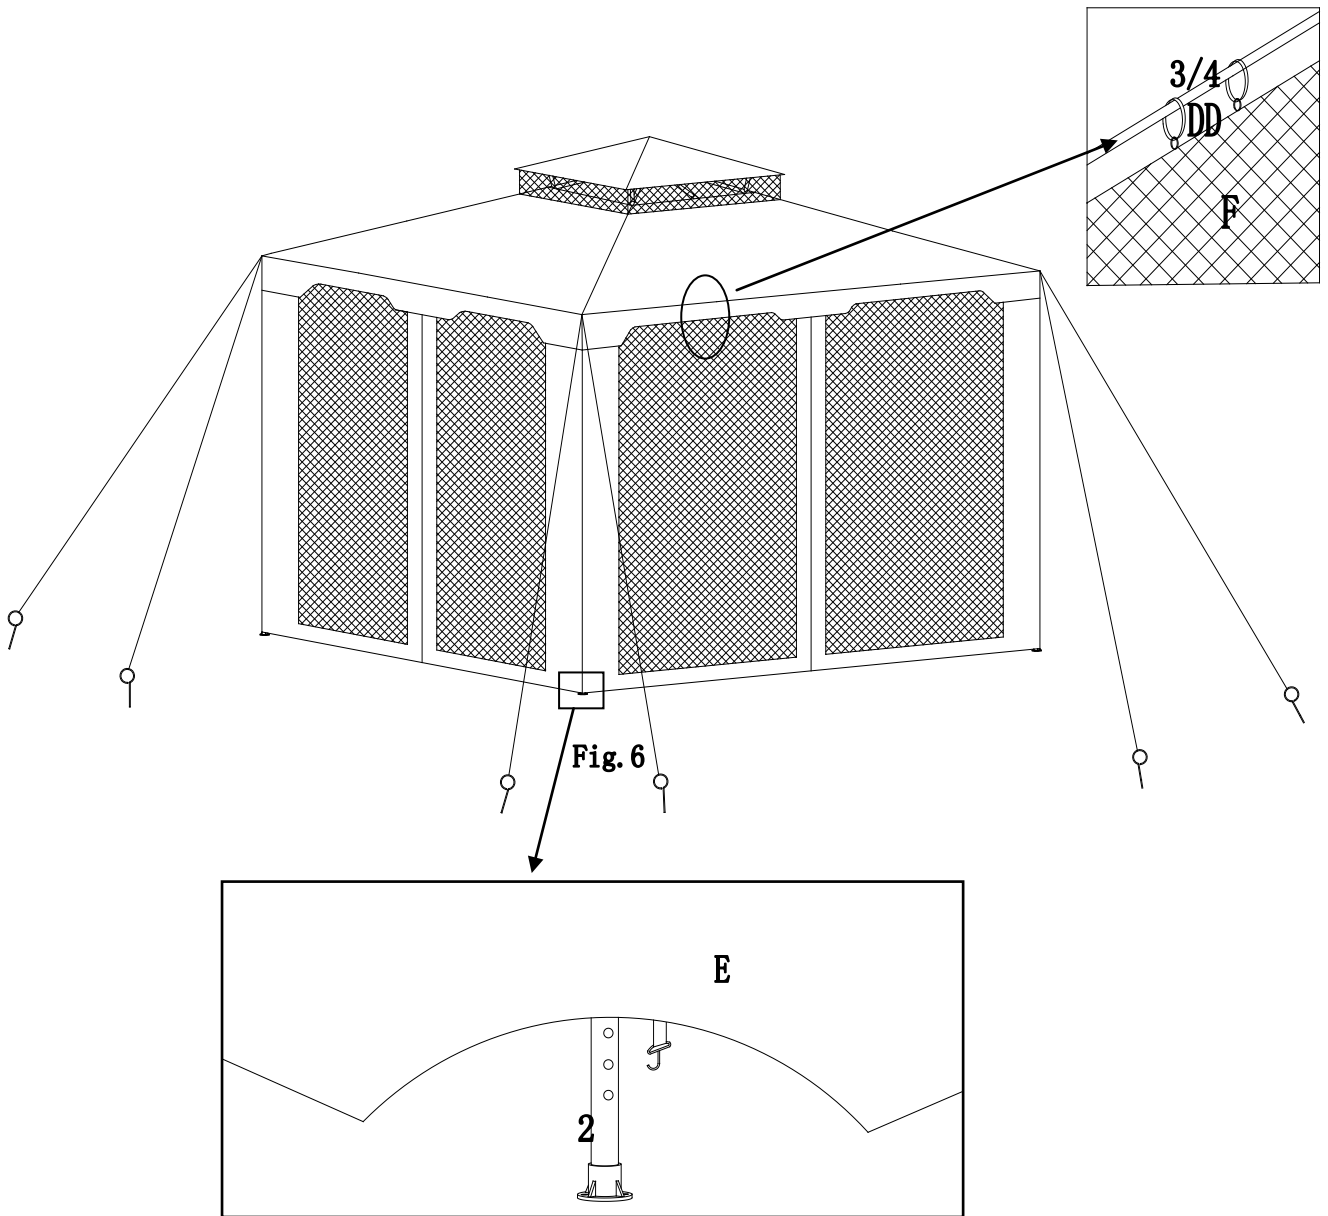 


Fig6: At last, unfold the big canopy (E), put hooks of canopy four corners into holes of down posts. Use rope (BB) to tie up four corners, strengthen with big stake (CC). Hang mosquito netting (F) onto support pipes (3,4) with ring (DD).

USE & CARE

1. This Gazebo is not a permanent structure and should be disassembled & stored away after use.
2. Do not repack your gazebo until completely dry.
3. This Gazebo must be assembled by two adults or more.
4. This Gazebo must not be left erect in windy conditions.

WARNINGS

1. Assembly Instructions must be followed.
2. Pegs supplied must be used to hold this gazebo in place when upright.
3. Warranty does not cover damage due to extreme weather conditions.

CUSTOMER SERVICE

Sunjoy Industries warrants to the original purchaser that this item is free from defects in workmanship and materials of your item provided the item was factory-sealed at the time of purchase and is maintained with care and used only for personal, residential purposes. The item is warranted to be free from defects in material or workmanship for a period of **1 year**. Should any manufacturing defect arise within this warranty period, Sunjoy Industries will repair or replace (at our option) any defective merchandise upon proof of purchase; however, transportation and delivery costs, as well as labor and material charges to remove or replace parts, remain the responsibility of the purchaser. A purchaser of an "open box," previously-returned, or "clearance" item, as well as original purchasers outside of the warranty period, may obtain replacement parts from Sunjoy Industries for products in current production, at nominal cost.

If you are within the return policy that most stores have, you do have the option of returning this item back to the store which you bought it from for an exchange of the same item, or a refund of the purchase.

If you are within or beyond the return policy that most stores have, and need tech. assistance or replacement parts, please call Sunjoy Industries at 1(866) 578-6569 from 8:30 am to 4:30 pm eastern standard time or e-mail to Biglots@sunjoygroup.com or fax your parts replacement order form together with the purchase receipt to 1 (740) 283-3549 for assistance.