 




1146 Farmhouse Lane, San Luis Obispo, CA 93401 USA
 1-805-528-6321 | 1-888-777-5557
 www.ReallyRightStuff.com

SCREW-KNOB CLAMPS

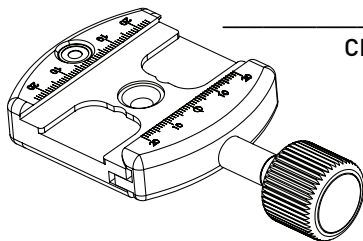


CLAMP ID

*B2-Pro II pictured;
 models vary.*

Really Right Stuff screw-knob clamps are compatible with all Really Right Stuff and Arca-style quick-release plates. Models vary in jaw length and features. Models with non-threaded center holes include mounting screw and hex key. Check our website for detailed specifications on all clamps.


KEY FEATURES

Top View of B2-Pro II:

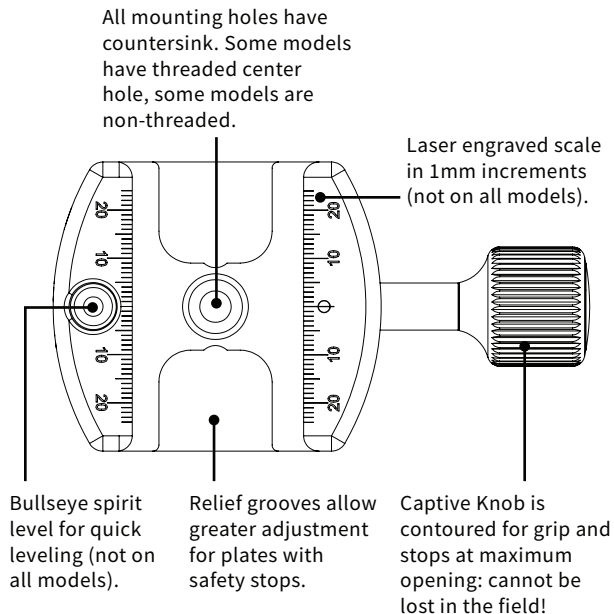

KEY FEATURES

Bottom View of B2-Pro:

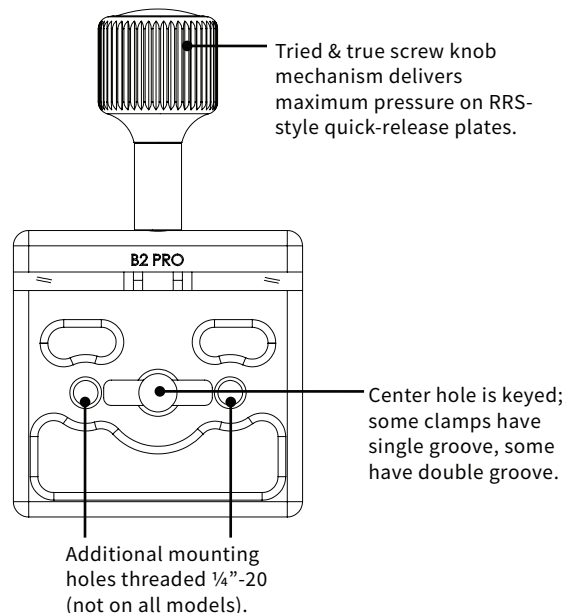

CARE AND MAINTENANCE

Our anodized aluminum clamp delivers a lifetime of wear. However, from time to time, we recommend placing a drop of lubricant on the shaft to prevent the stainless steel and aluminum from binding. If you find that your clamp is not closing as smoothly as it used to, simply unscrew the knob to fully open the clamp, squeeze the jaws together with your fingers, and pull back the aluminum tube to expose the threads. Then blow out any dirt or grit, and place a drop of lubricant on the shaft and threads.

GUARANTEE

ALL REALLY RIGHT STUFF BRAND PRODUCTS ARE GUARANTEED TO THE ORIGINAL PURCHASER TO BE FREE OF DEFECTS IN MATERIALS OR WORKMANSHIP FOR FIVE (5) YEARS FROM THE DATE OF PURCHASE. PRODUCTS WILL BE REPAIRED OR REPLACED AT OUR OPTION.

®, ™, © 1990-2016 Really Right Stuff, LLC. All rights reserved.

INSTALLING YOUR CLAMP



THREADED HOLE

Spin clamp onto male threaded stud until tight. Use bushing to convert 1/4"-20 stud into 3/8"-16 stud (purchase and install Stud into female sockets tapped 3/8"-16). Semi-permanently secure clamp to the stud with non-permanent threadlocker fluid. Stud, bushing, & single applications of threadlocker are available on our website.



NON-THREADED HOLE

Drop clamp onto a female tapped socket (tapped either 1/4"-20 or M6). Install screw from above, through the mounting hole and into the ballhead.


ADDITIONAL MOUNTING HOLES

Some of our clamps feature additional mounting holes for alternate installations. The two outboard threaded holes will accept 1/4"-20 screws from below or smaller flat head screws from above.

USING YOUR CLAMP


SIDE LOADING

Turn knob one full rotation to open clamp for side-loading your plate.

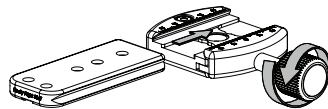


TOP LOADING

Turn knob 2 1/2-3 full rotations to open clamp wide enough for top-loading your plate. You must top-load your plate if the plate has dual safety stop screws.

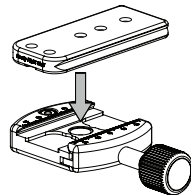

LOCKING

Tighten knob firmly, until plate is locked within clamp.

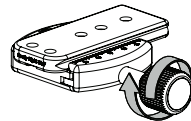

SPECIAL NOTE FOR B2-DUO CLAMP

Nylon thumbscrews function only to keep lens plate/foot in place when knob is loosened to make positioning changes. Always tighten knob firmly to lock single clamp jaw before shooting.

