 


# PRIME WIRELESS SPEAKER

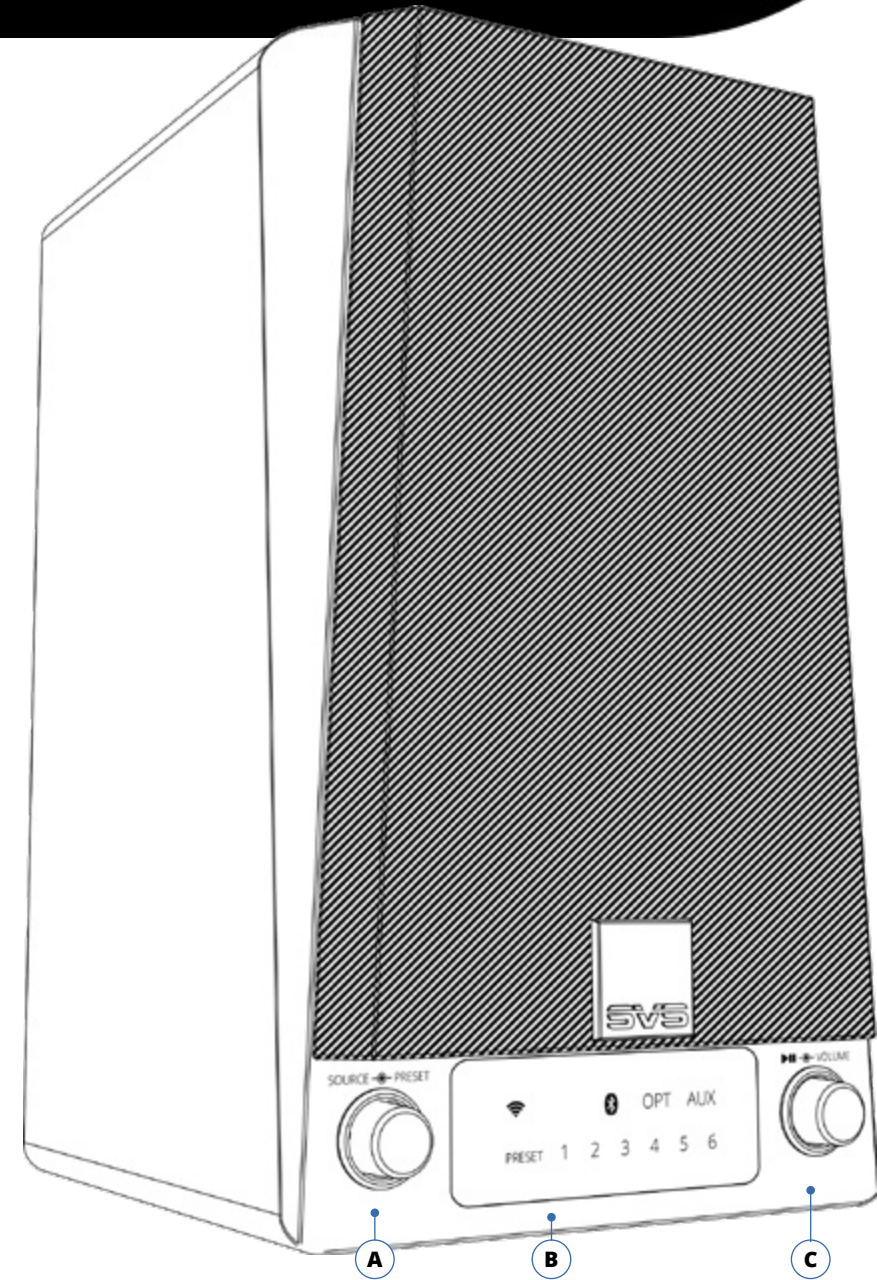

## A Source & Preset Control

Rotate the knob to change the input. Press the knob to select a preset (after they are programmed).

## B Front Panel Display

LED backlighting indicates the selected audio source (Wi-Fi, Bluetooth, Optical or Auxiliary) and preset (1-6).

## C Play, Pause & Volume Control

Rotate the knob to adjust volume. Press the knob to pause/un-pause.

## Welcome!

Congratulations on bringing home the SVS Prime Wireless Speaker, a stunning achievement in sound quality and speaker versatility. We know you are eager to start playing so this Quick Start Guide will walk you through the various controls and connections and get you on the fast path to enjoying high-resolution wireless streaming of your favorite playlists and music services.

## Included Accessories



## Setting Up Wi-Fi and the DTS Play-Fi App

### 1 Download Play-Fi App

Search "Play-Fi" and download the free DTS Play-Fi app to unlock the full functionality of your SVS Prime Wireless Speakers.

### 2 Start Speaker Wi-Fi Setup Mode

Once powered on, the speaker will automatically go into Wi-Fi setup mode, indicated by a rapidly blinking yellow light on the rear panel of the speaker. When the blinking light slows down, the speaker is ready to connect. Wi-Fi connection is confirmed when yellow light remains on permanently.

### 3 Connect Speaker to Wi-Fi Network

**iOS users** must go to the "Settings" -> "Wi-Fi" and connect to "PlayFiDevice..." like you would a normal Wi-Fi network.

 
**Android users** skip to step 4.

### 4 Configure Play-Fi App

Open the Play-Fi app and follow the prompts to finish setting up your Prime Wireless Speaker on your home Wi-Fi network.

*Note: The speakers may require an update before letting you stream music. The Play-Fi app will show a notification and complete the update automatically. This is normal and can take 3-5 minutes.*

*If your SVS Prime Wireless speaker is not being discovered by the Wi-Fi network, try moving it closer to your router or to a stronger signal area to establish a connection. Also, make sure the speaker and app are both configured to the same Wi-Fi network in your home.*

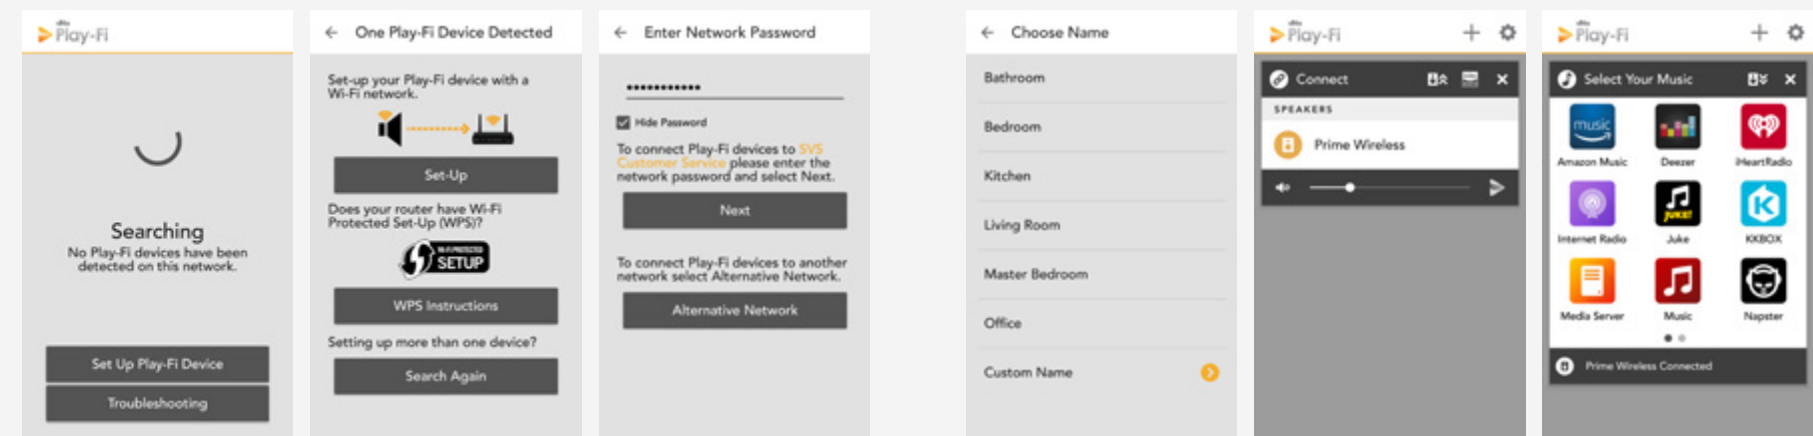

1 Select "Set Up Play-Fi Device"  
 2 Choose "Set-Up" to configure your Speaker and Wi-Fi network.  
 3 Enter your Wi-Fi network password and select "Next"  
 4 Choose a name for your Prime Wireless Speaker.  
 5 Select new device name from Play-Fi menu.  
 6 Select your favorite streaming method/service

### Create Custom Presets

Up to six presets are available for instant access to your favorite streaming music channels, playlists and other content.

- From the Play-Fi app, start the streaming service you want to set as a preset.
- Press the left control knob **A** to select which preset **B** you want to set (1-6). Each press will move to the next preset.
- When desired preset number is selected, press and hold the preset knob for three seconds. The preset number will flash several times then stay on to confirm, and music will resume playing.
- Follow instructions above for the remaining five presets.
- You can now access your favorite content by pressing the left knob to toggle through your presets at any time.

To reset a preset, repeat the steps 1 - 5.

*NOTE: It takes a few seconds for the preset to connect to music services from your Wi-Fi network. This is normal.*



*Current services available as presets. More options coming soon, check svsound.com/products/prime-wireless for updates.*

Once your speakers are set up, you can access music from your devices and your favorite streaming services. You can also enjoy full resolution Critical Listening Mode Critical Listening Mode, create a multi-room audio system, and more.

# PRIME WIRELESS SPEAKER

## Connections and Controls

### 1 Sub Out

Add a subwoofer using standard audio interconnect cable (not included) or the optional SVS SoundPath Wireless Kit.

### 2 L/R AUX In

Connect any stereo source that has a left and right stereo analog output.

### 3 Out to Left Speaker

Connects your active Prime Wireless speaker to the passive speaker using supplied speaker interconnect cable.

### 4 Optical In

Connect sources with optical digital outputs such as a TV or game console.

### 5 3.5mm AUX In

Connect to headphone outputs of smartphones, tablets or other audio devices.

### 6 Wi-Fi Setup

Puts speaker into Wi-Fi set-up mode and shows status of wireless connection. Blinking yellow light indicates set-up mode, solid light means it's set-up and ready to use.

### 7 In/Out Network

Connect standard Ethernet cable for hard-wired Internet connection.

### 8 Mono/Stereo

Toggles between Mono mode for a single Prime Wireless powered speaker or Stereo mode for active and passive Prime Wireless speaker pair.

 
### 9 Service

For firmware updates and for powering or charging USB devices.


### 10 Bluetooth Setup

Puts speaker in Bluetooth pairing mode and shows status of Bluetooth connection. Blinking blue light indicates pairing mode, solid light means it's connected and ready to use.


### 11 AC Power Cord Input

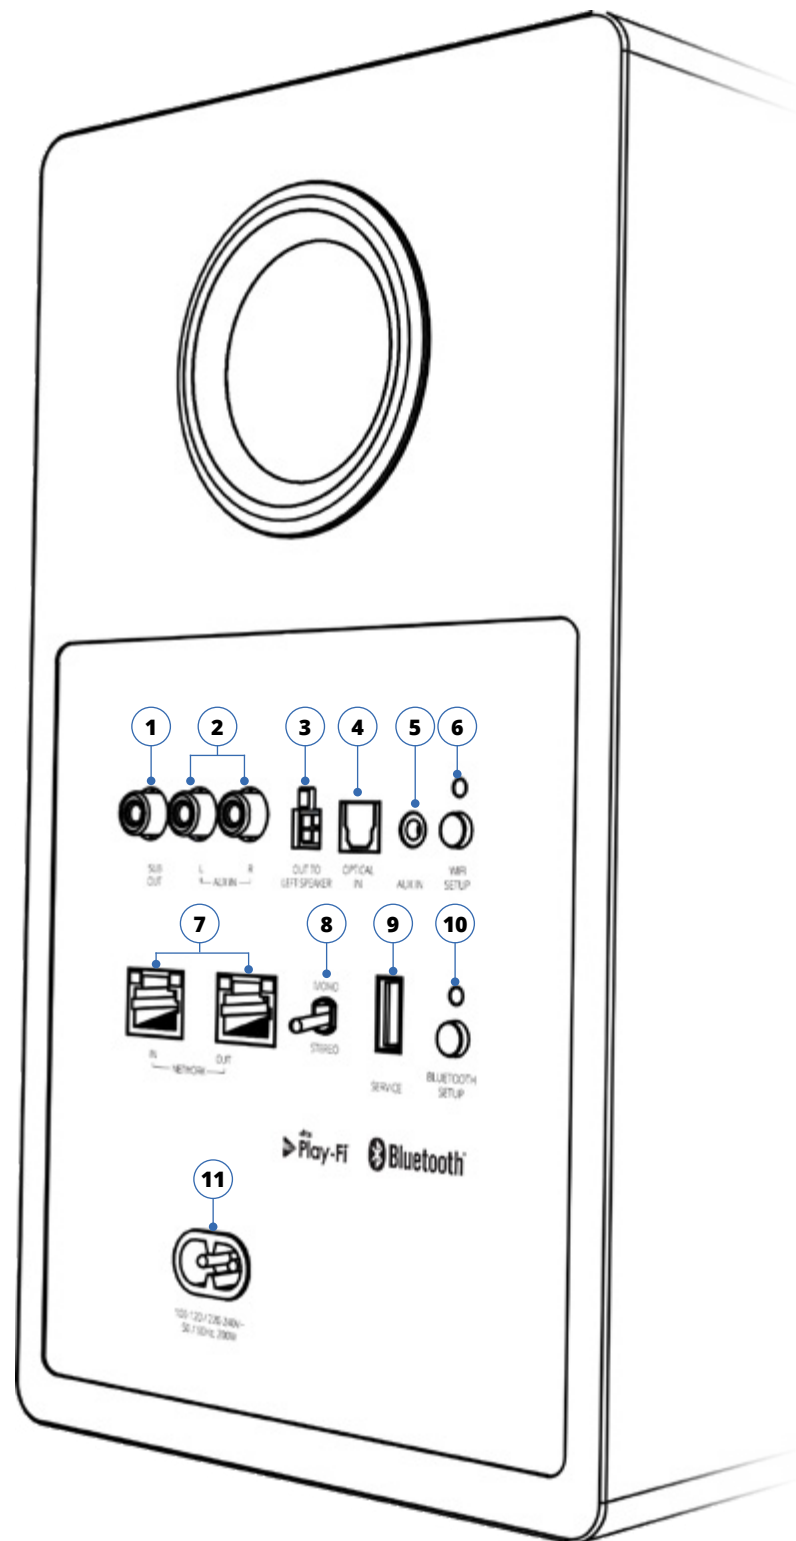

## Setting up a Single Prime Wireless Speaker

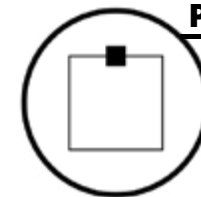 


 1. Place your speaker in the desired location.
2. Switch speaker to "Mono" via rear panel **8**.
3. Plug in power cord **11** and continue to "Setting Up Wi-Fi and the DTS Play-Fi App" section.

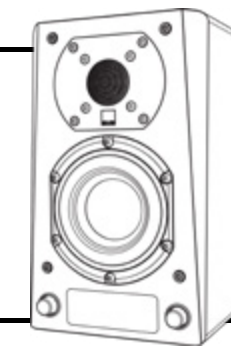

Power Cord

## Setting up a Pair of Prime Wireless Speakers in Stereo

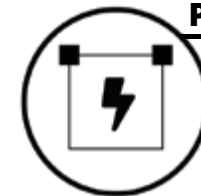 


1. Place speakers in desired location near AC power outlets.
2. Set switches on rear panel of both speakers to "Stereo" **8**.
3. Plug in power cords **11** and continue to "Setting Up Wi-Fi and the DTS Play-Fi App" section to set up and name each speaker.
4. Use the Play-Fi app to set up the speakers as a stereo pair. This is in the settings section of the Play-Fi app.




Power Cord



 
Power Cord

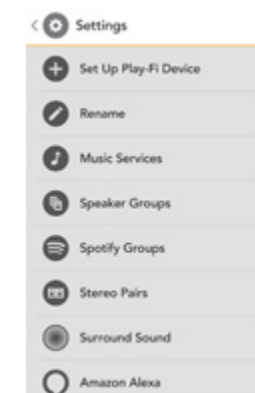

 
Go to "Settings" and select "Stereo Pair".

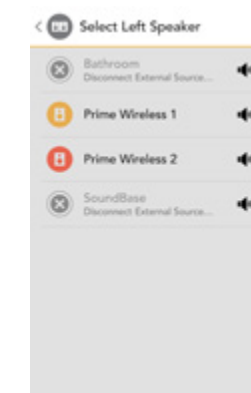

Assign left speaker via menu options.

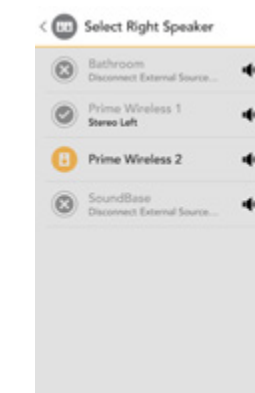 

Assign right speaker via menu options.

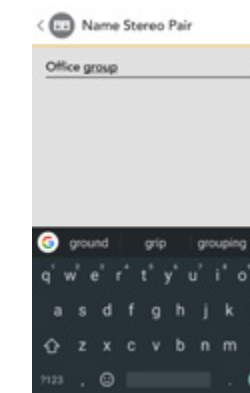 

Name the Stereo Pair and save by tapping the circle with the arrow inside.

#### NOTE: Limitations When Using Prime Wireless Speakers in Stereo Pair

1. Stereo use only supported with Play-Fi sources from the Play-Fi app. AUX, Optical and Bluetooth inputs not supported for stereo pair playback.
2. Volume should be adjusted from the Play-Fi app to maintain balanced output. Control knobs will only adjust volume for the individual speaker, not the stereo pair.
3. Presets not supported for stereo pair playback.

1 2 3 4

## Owner Support

For help with connecting your SVS Prime Wireless Speakers, using the Play-Fi App or anything else, SVS Sound Experts are available 7 days a week.

[custservice@svsound.com](mailto:custservice@svsound.com) (877) 626-5623 Visit [svsound.com](http://svsound.com) for online chat

The full SVS Prime Wireless Speaker System owners manual can be found here: [www.svsound.com/prime-wireless-manual](http://www.svsound.com/prime-wireless-manual)