

INSTALLATION GUIDE

3-hole wall mount tub filler r+s

BRUSHED NICKEL(BN)













OPERATING SPECIFICATIONS

3-hole wall mount tub filler r+s

for associated valves | F906A-V0

OPERATING PRESSURE

Minimum: 15 psi Maximum: 125 psi

FLOW CAPACITY

5.6USGPM@60 psi (each valve) TOTAL= 11.2USGPM

INLET/OUTLET

1/2" Male NPT

STANDARDS

ASSE 1016.ASME A112.18.1/CSA B123.1 Certified


CODES

CUPC Approved








PRODUCT DIMENSIONS

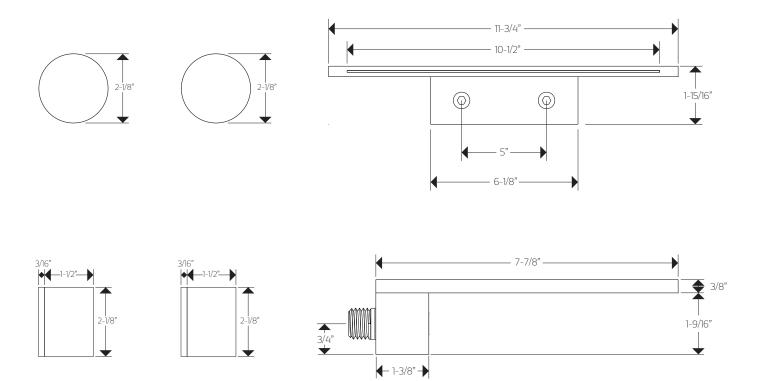



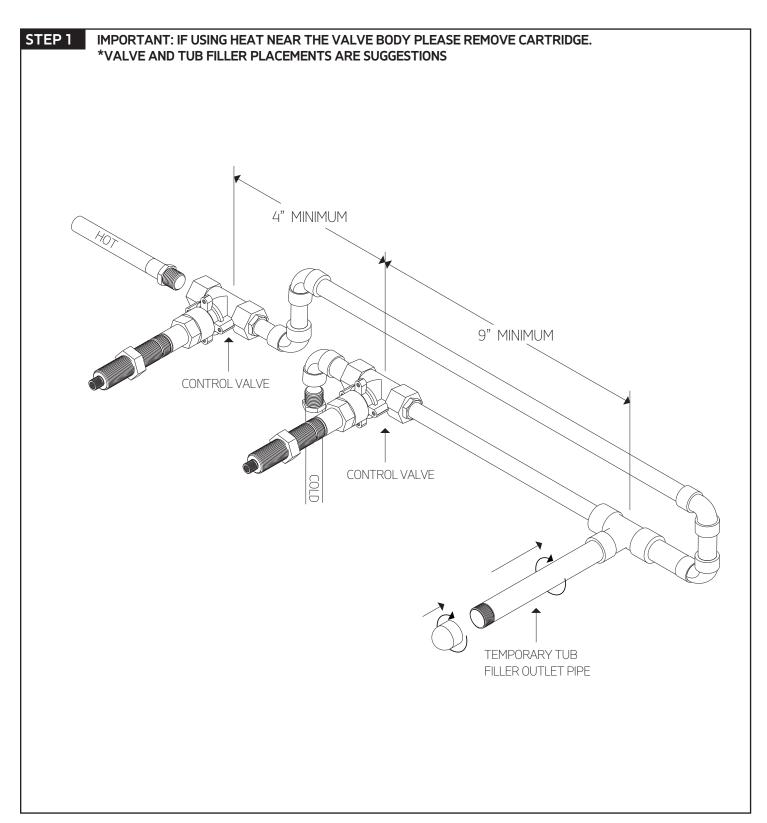


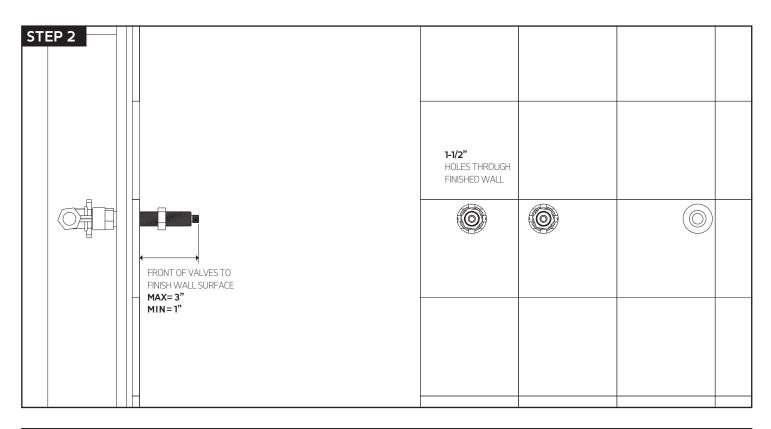


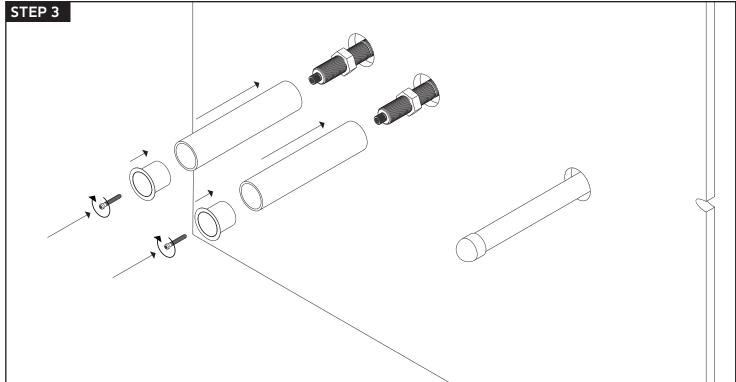



WESTOVER, INC

F302-7

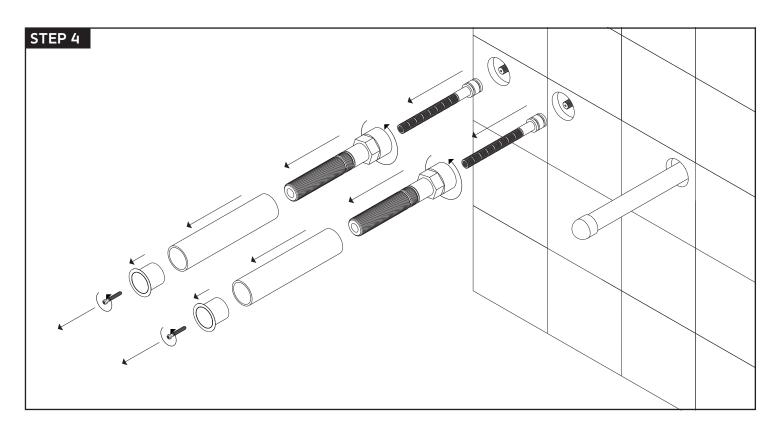

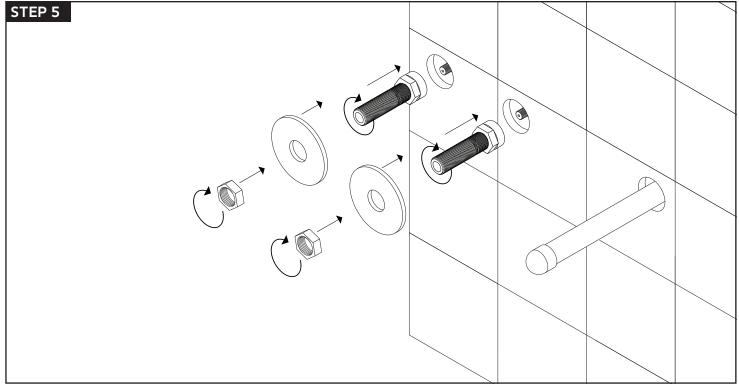


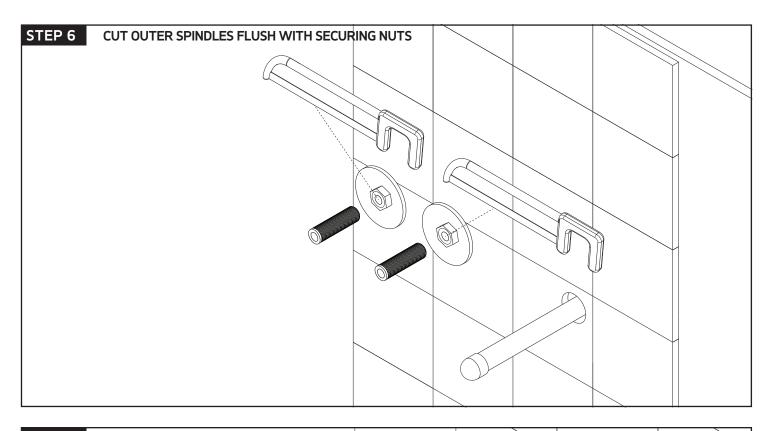


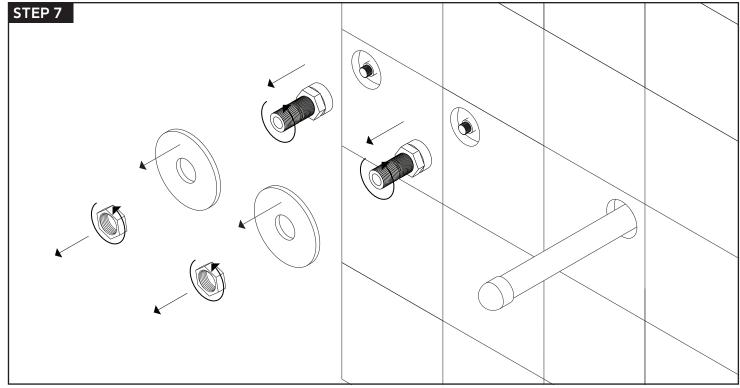



WESTOVER, INC

F302-7

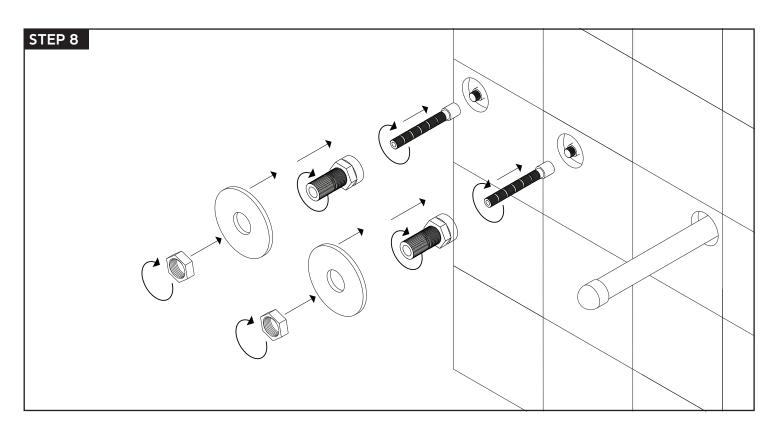

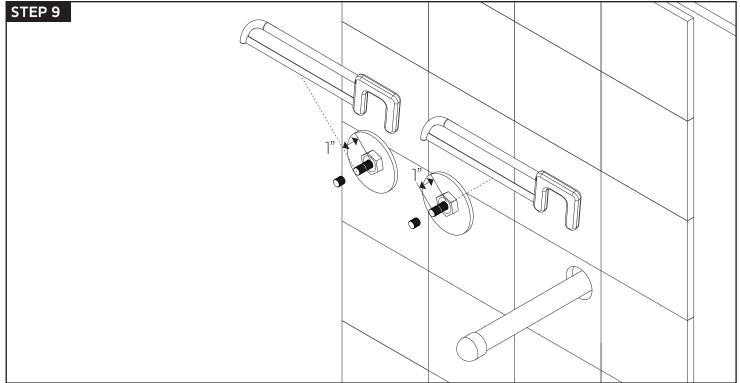

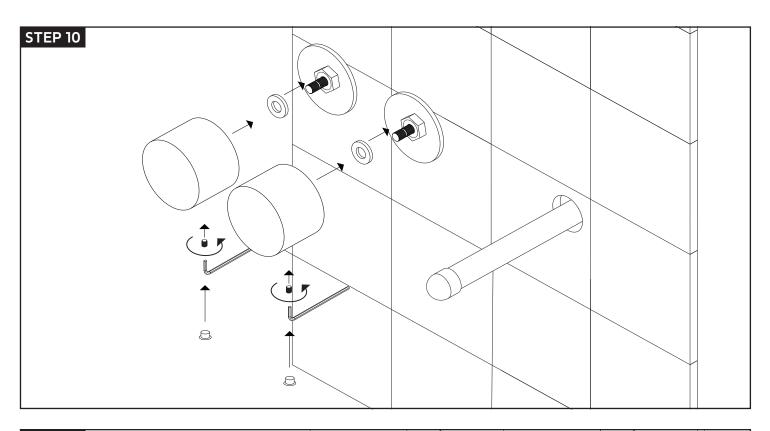

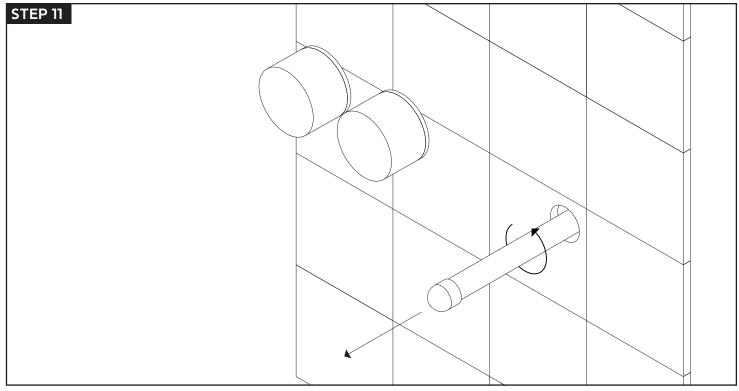


WESTOVER, INC


13305 B STREET OMAHA, NEBRASKA 68144


WWW.ARTOS.US.COM

T:877.927.8679

F302-7|

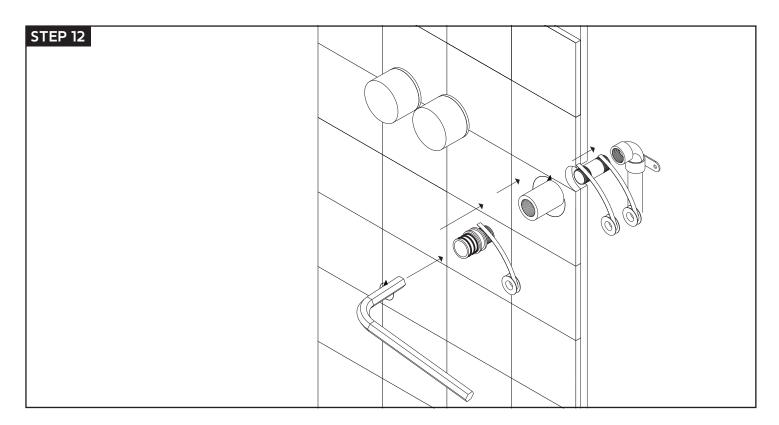

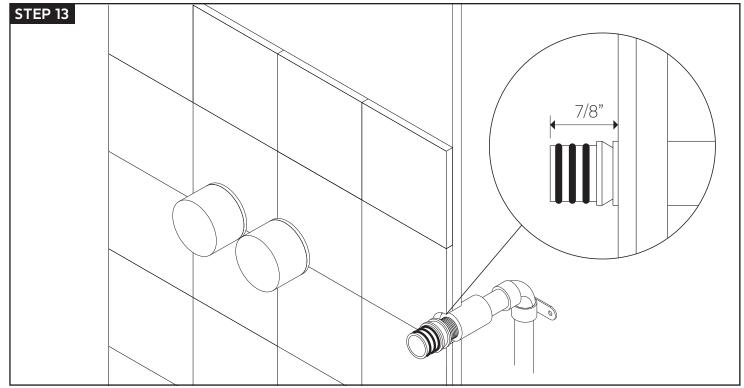


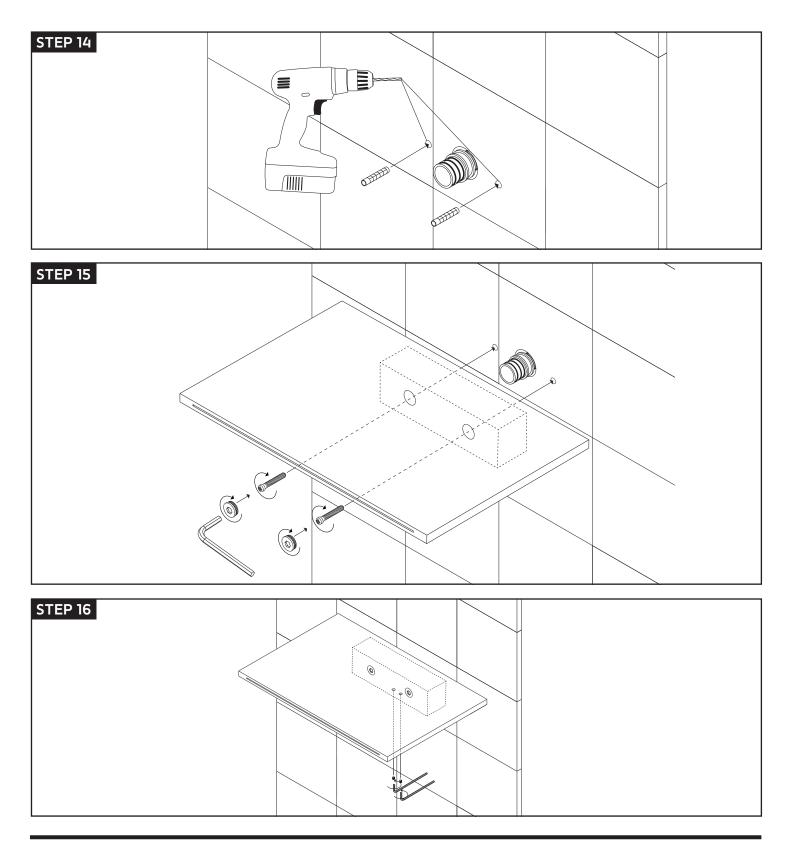

WESTOVER, INC 13305 B STREET OMAHA, NEBRASKA 68144 WWW.ARTOS.US.COM T:877.927.8679

F302-71 3-hole wall mount tub filler r+s UPPER SPOUT PANEL(TOP VIEW) 1) UPPER SPOUT PANEL F402-4 XP1 2 LOWER SPOUT PANEL F402-4 XP2 (3) LOWER SPOUT PANEL SCREWS F402-4 XP3 4 SPOUT BOTTOM PLUGS F402-4 XP4 (5) **SPOUT BODY** F402-4 XP5 (6) BODY SECURING SCREWS F402-4 XP6 7) BODY SCREW CAPS F402-4 XP7 8 ALLEN WRENCH F402-4 XP8 (9) **SPOUT BODY WASHER** F402-4 XP9 (ii) **SPOUT BODY** F402-4 XP10 (ii) **SPOUT BODY SEAL** F402-4 XP11 (12) **SET SCREWS** F402-4 XP12 (B) ALLEN WRENCH F402-4 XP13 (14) WALL ANCHORS F402-4 XP14 (5) WALL CONNECTOR F402-4 XP115 (6) ALLEN WRENCH F402-4 XP16 **D** LOWER SPOUT PANEL TO **BODY SCREWS** F402-4 XP17

PARTS BREAKDOWN

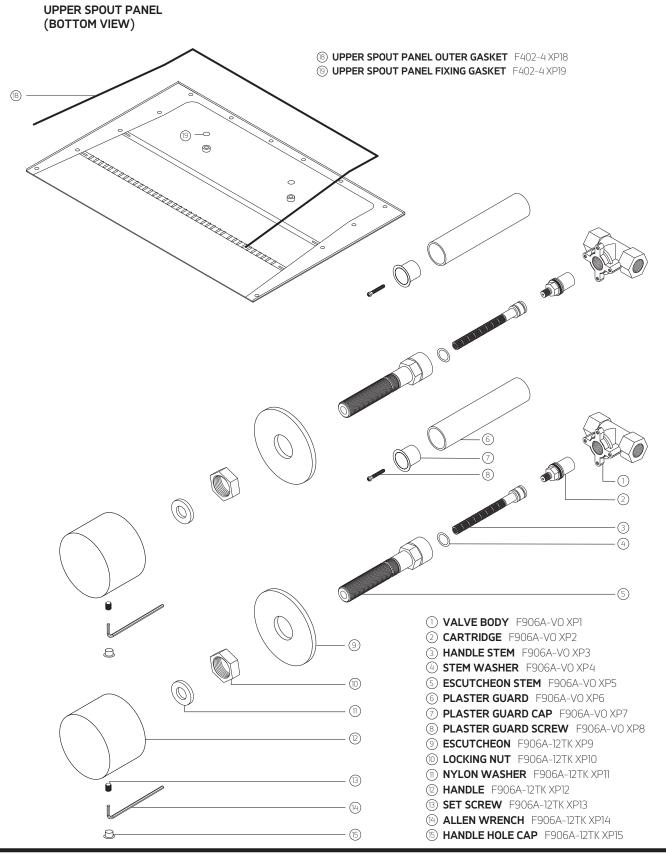



CARE & MAINTENANCE

3-hole wall mount tub filler r+s

For best results, keep the following in mind to retain the high quality finish of your $art.os^*$ faucets:

- •Use a soft, dampened sponge or cloth. On no account should you use an abrasive material such as a brush, scouring pad or steel wool to clean surfaces.
- Test your cleaning agent solution on an inconspicuous area before applying to the entire faucet.
- Wipe surfaces clean and rinse completely with water immediately after applying cleaning agent.
- An ideal cleaning technique is to rinse faucet thoroughly and blot dry any water from the surface after each use.

LIMITED LIFETIME WARRANTY

Artos® Limited Lifetime Warranty

Artos® faucets have been manufactured under the highest quality and manufacturing standards. Artos® faucets are guaranteed for life against leaks and manufacturing defects for as long as the original consumer purchaser owns it. This warranty applies to installations in the US, Canada and Mexico (North America). Commercial, Industrial or business uses are warranted for a period of one year from the original date of purchase.

This warranty is non-transferable and applies exclusively to the original owner or end-user. If a defect is found during normal use, Artos® will, at its election, repair, replace or make an appropriate adjustment. Damage caused by accident, misuse, abuse, improper installation or alteration will void the warranty. This warranty does not cover replacement parts where damage is caused by normal wear and tear. Labor charges, installation or other incidental or consequential costs will not be covered.

Replacement parts that qualify for warranty repair can be obtained by contacting Artos® at 1-877-9ARTOS9 or by e-mail at info@artos.us.com. Proof of purchase (original sales receipt) from the original consumer purchaser must accompany all warranty claims. When submitting your claim in writing, please provide your name, address and telephone number.

Please register this product online at WWW.ARTOS.US.COM

Item No: F302-7

Serial No: