Brass Nozzle Holder with 2" UNC (50mm) Contractor Thread



- Use HF SCR4 coupling screws not included
- Use HF GFBL nozzle washer not included

Refer to page 138 for washer selection

Part Number	Description	Suits Blast Hose with Outside Diameter	
HF BNH1C	Brass Nozzle Holder	BH20 BHS25	1 %16" (40 mm)
HF BNH2C	Brass Nozzle Holder	BH25 BHS32	1 1/8" (48 mm)
HF BNH3C	Brass Nozzle Holder	BH32 BHS40	2 5/32" (55 mm)
HF BNH4C	Brass Nozzle Holder	BH40	2 3/8" (60 mm)

Brass Nozzle Holder with 1 1/4" NPSM (32mm) Fine Thread



- Use HF SCR4 coupling screws not included
- Use HF GFBM nozzle washer not included

Refer to page 138 for washer selection

Part Number	Description	Suits Blast Hose with Outside Diameter	
HF BNH1F	Brass Nozzle Holder	BH20 BHS25	1 %16" (40 mm)
HF BNH2F	Brass Nozzle Holder	BH25 BHS32	1 %" (48 mm)
HF BNH3F	Brass Nozzle Holder	BH32 BHS40	2 5/32" (55 mm)
HF BNH4F	Brass Nozzle Holder	BH40	2 3/8" (60 mm)

Aluminum Nozzle Holder with 2" UNC (50mm) Contractor Thread



- Use HF SCR2 coupling screws not included
- Use HF GFBL nozzle washer not included

Refer to page 138 for washer selection

Part Number	Description		Suits Blast Hose with Outside Diameter	
HF ANH1C	Aluminum Nozzle Holder	BH20 BHS25	1 %" (40 mm)	
HF ANH2C	Aluminum Nozzle Holder	BH25 BHS32	1 %" (48 mm)	
HF ANH3C	Aluminum Nozzle Holder	BH32 BHS40	2 3/16" (55 mm)	
HF ANH4C	Aluminum Nozzle Holder	BH40	2 3/8" (60 mm)	

Aluminum Nozzle Holder with 1 1/4" NPSM (32mm) Fine Thread



- $\bullet\,$ Use HF SCR4 coupling screws not included
- Use HF GFBM nozzle washer not included
- Use HF ANHE1F for blow down hose adaptor Refer to page 138 for washer selection

Part Number	Description	Suits Blast Hose with Outside Diameter	
HF ANHE1F	Aluminum Nozzle Holder	BH20 BHS25 1 1 1 1 (40 mm)	
HF ANHE2F	Aluminum Nozzle Holder	BH25 BHS32 1 1/8" (48 mm)	
HF ANHE3F	Aluminum Nozzle Holder	BH32 BHS40 2 3 1/4" (55 mm)	
HF ANHE4F	Aluminum Nozzle Holder	BH40 2 3%" (60 mm)	



Aluminum Nozzle Holder with 3/4" NPSM (20mm) Medium Thread



- 3/4" NPSM (20 mm) thread Use HF SCR-2 coupling screws not included
- Use HF GFBS nozzle washer not included

See page 123 for nozzle thread adaptors

Part Number	Description	Suits Blast Hose with Outside Diameter	
HF ANH1/2M	Aluminum Nozzle Holder	BHS13	1 ¾16" (30 mm)
HF ANHOM	Aluminum Nozzle Holder	BH13 BHS20	1 ¹¹ / ₃₂ " (34 mm)
HF ANH1M	Aluminum Nozzle Holder	BH20 BHS25	1 %°" (40 mm)

Nylon Nozzle Holder - with 2" UNC 50mm Contractor Thread



- 50 mm (2" UNC) Contractor coarse thread
- Use HF G25 or 32 Series nozzle washer not included
- Coupling screws not included purchase separately
- Use HF SCR-2 coupling screws for HF PNH-3/4
- Use HF SCR-4 coupling screws for other HF PNH sizes



Part Number	Description		Suits Blast Hose with Outside Diameter	
HF PNH¾	Nylon Nozzle Holder	BH13 BHS20	1 11/32" (34 mm)	
HF PNH1	Nylon Nozzle Holder	BH20 BHS25	1 %" (40 mm)	
HF PNH2	Nylon Nozzle Holder	BH25 BHS32	1 %" (48 mm)	
HF PNH3	Nylon Nozzle Holder	BH32 BHS40	2 ⁵ / ₃₂ " (55 mm)	

PHE Nylon Nozzle Holder – with 1 1/4" NPSM (32mm) Fine Thread



- 1 1/4" (32 mm) NPSM Fine Industrial thread
- Use HF GFBM nozzle washer not included
- Use HF SCR-4 coupling screws not included

Part Number	Description	Suits Blast Hose with Outside Diameter	
HF PHE3/4	PHE Nylon Nozzle Holder	BH13 BHS20 1 11/32" (34 mm)	
HF PHE1	PHE Nylon Nozzle Holder	BH20 BHS25 1 %" (40 mm)	
HF PHE2	PHE Nylon Nozzle Holder	BH25 BHS32 1 1/8" [48 mm]	
HF PHE3	PHE Nylon Nozzle Holder	BH32 BHS40 2 5/32" (55 mm)	

Quick Couple Nylon Nozzle Holder



- Enables extension blast hose to be used as a nozzle end
- Supplied with HF GPCG-3 gasket fitted
- Integral spring lock pin
- Standard claw, standard bore connector compatible with other standard couplings

Part Number	Description
HF PTC1	Quick Couple PHE 1 1/4" Fine Thread Nozzle Holder
HF PTC50	Quick Couple Contractor Coarse Thread Nozzle Holder
HF PTCFL	Quick Couple Flange Nozzle Holder

www.Blast0ne.com