


Please read through this owners manual carefully before using your new tool. Use your tool properly and only for its intended purpose.

# Fowler® XTRA-VALUE Plus Electronic Caliper

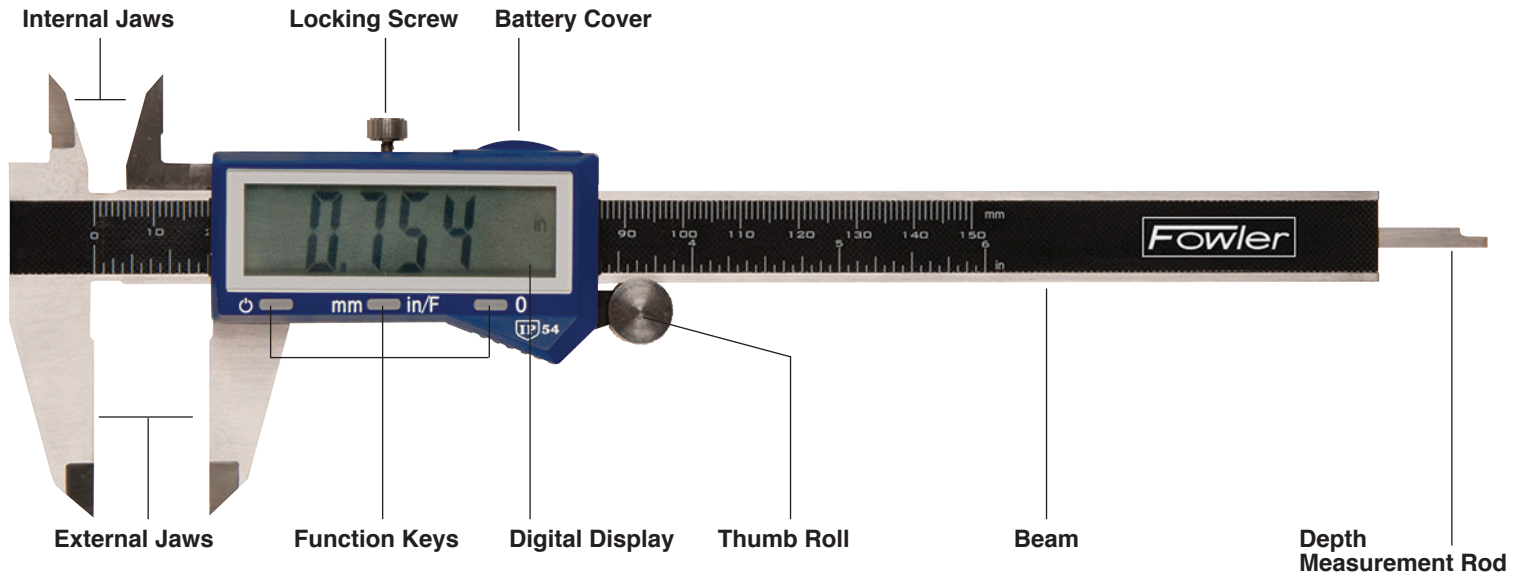

### Functions

**On/Off:** Press button once to turn on. Press it again to turn off. Auto shut off will turn unit off after several minutes.

**Zero:** Press button to set zero at any position

**mm/in/F:** Press button to switch between inch, mm and fractions.

### Technical Data

**Measuring Range:** 0 - 6"/0 - 150mm  
0 - 12"/0 - 300mm

**Resolution:** 0.0005" / 0.01mm / 1/128"

**Accuracy:** 6" - 0.001"/0.02mm  
12" - 0.0015"/0.03mm

**Repeatability:** 0.0005"/0.01mm

**Battery:** 3V CR2032

*\*IP54 Rated*

### Troubleshooting & Reset

**Display flashing or no display:**  
Change Battery

**Digits not changing or counting incorrectly:**  
Reset

**Reset:**  
Remove the battery, wait 3 to 5 minutes, replace the battery and turn the gage on.


### Battery Replacement

Place the caliper on a table facing up. Pull out the battery holder; remove the used battery; make sure the battery holder is facing down and the new battery " - " side is facing downward; Insert the battery holder with the new battery into the battery compartment. Make sure the rubber seal stays in place. In case it falls into the battery compartment, please remove with care to avoid damaging the battery contacts. Please recycle the used battery responsibly.

### Front View



### Rear View

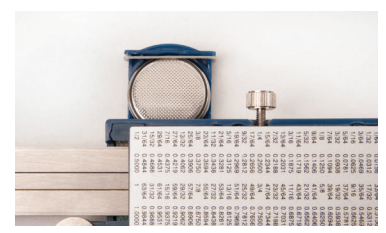

### PRECAUTIONS:

- **Do Not** expose the caliper to direct sunlight or cold temperatures
- **Do Not** attempt to disassemble the caliper
- **Avoid** exposure to electromagnetic fields
- **Avoid** exposure to all liquids and excessive humidity