
## ASSEMBLY INSTRUCTION


Item no.; D219DT Description; dining table

Thank you for purchasing this quality product .Be sure to check all the packing material carefully for small parts that may have come loose inside the carton during shipment .



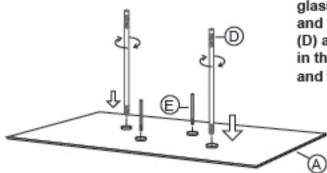

step 2:

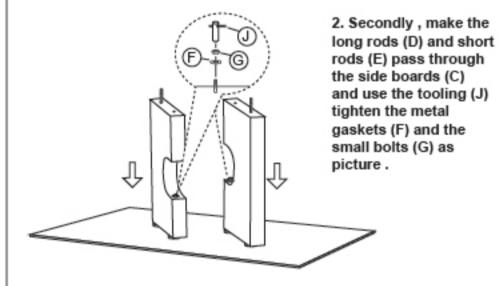

glass (A) as picture and fix the long rods (D) and short rods (E) in the metal connector and fasten them well.


1.Firstly, Put the top

PART LIST:				
NO.	Description	Dlagram	Quantity	
Α	Top glass	$\langle \cdot \cdot \rangle$	1	
В	Stainless Base		1	
С	Side board		2	
HADDWADE LIST:				


## HARDWARE LIST:

TIANDWAKE LIST.				
NO.	Description	Diagram	Size	Quantity
D	Long Rod		M10x720mm	2
Е	short Rod		M10x245mm	2
F	Metal gasket		M10mm	6
G	Bolt		M10mm	4
Н	screw	-	φ 8x40mm	2
1	allen key	~	M5 mm	1
J	hexagon spanner	Û	M10mm	1
K	Feet	9	M8 mm	4



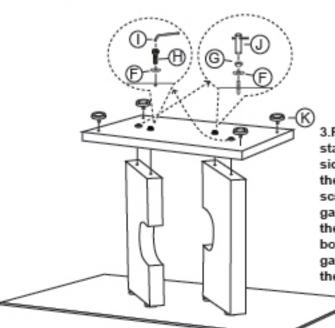

step 4:

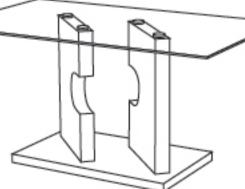

Finished

3.Finally ,Put the stainless base (B) on the side board (C) and use the tooling (I) tighten screw (H) and metal gasket (F) meantime use the tooling (J) fasten the bolt (G) and metal gasket (F) as picture then fasten the feet (K) .

Made in china


## ASSEMBLY INSTRUCTION

Model:D41DC

Description:Dining Chair


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Step 1:

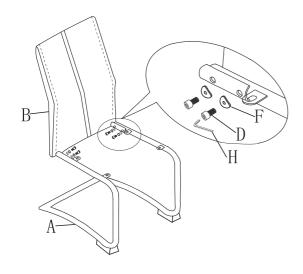

Firstly, fix the backrest with the chair leg but do not fully tighten the bolt(D).

Step 2:

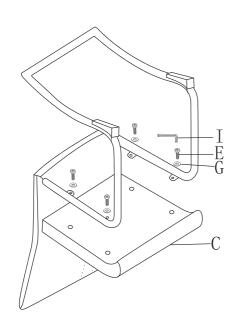

Assemble the chair seat with the chair leg but do not fully tighten the bolt(E).


PART LIST:

NO.	Description	Diagram	Quantity
A	Chair leg		1
В	Chair backrest		1
С	Chair seat		1

## HARDWARE LIST:

NO.	Description	Diagram	Size	Quantity	
D	Bolt	0	M8X20	4	
Е	Bolt	<u> </u>	M6X16	4	
F	Flat washer		M8X22	4	
G	Flat washer	0	M6X16	4	
Н	Allen key		M6	1	
Ι	Allen key		M4	1	

Finished

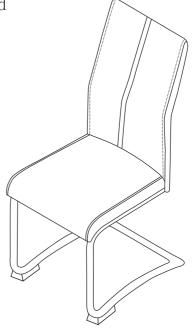

Finally, lean the chair with extra care and tighten the bolt.(D&E).

Made In China