


Assembly Instruction

DD-F02

Model No : ASPEN 196 Vanity Dresser

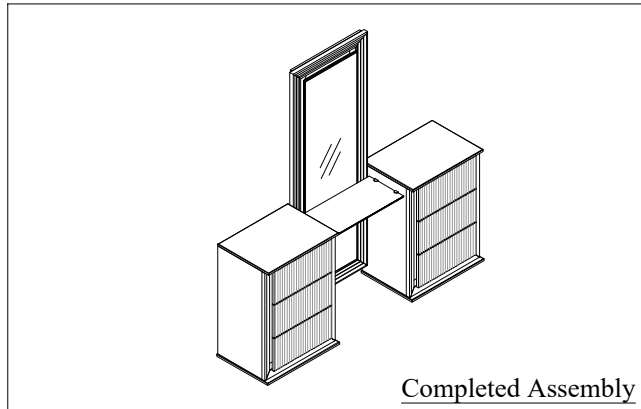




Thank you for purchasing this quality product.
Please check all packing material carefully which
may have come loose inside the carton during shipment.




PART LIST

No	Description	Qty
1	Vanity Dresser (Left)	1pc
2	Vanity Dresser (Right)	1pc
3	Floor Mirror	1pc
4	Mirror Supporter	2pcs
5	Glass Shelf	1pc


HARDWARE LIST

No	Description	Qty
A	JCBC Screw M6 x 30mm 	8pcs
B	JCBC Screw M6 x 35mm 	4pcs
C	Washer 	12pcs
D	Glass Shelf Clamp 	4pcs
E	CSK Screw M3.5 x 16mm 	8pcs


Step : 1

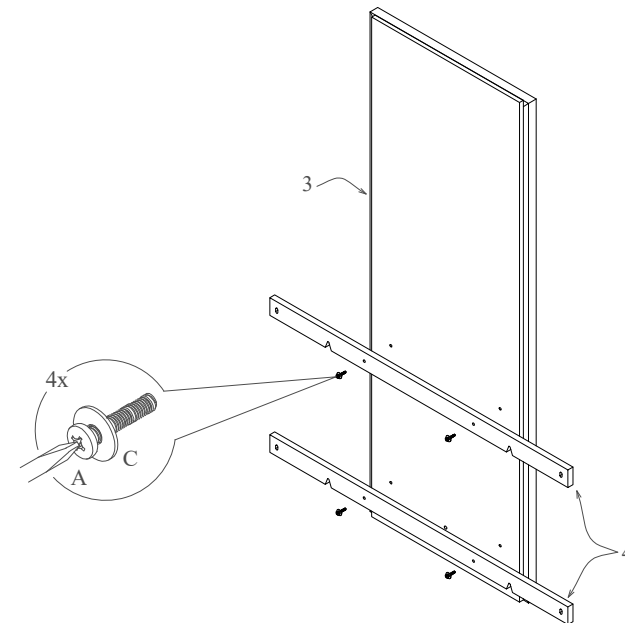


Step : 2

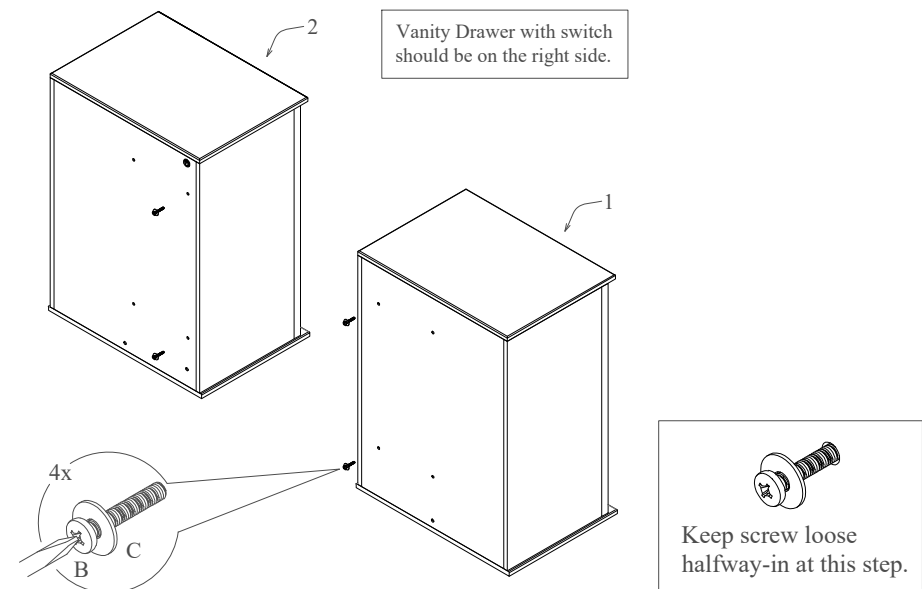


Step : 3

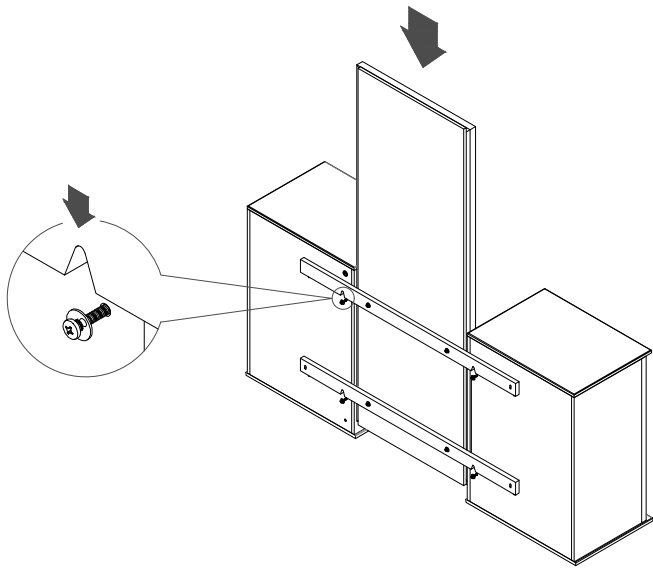


Step : 5

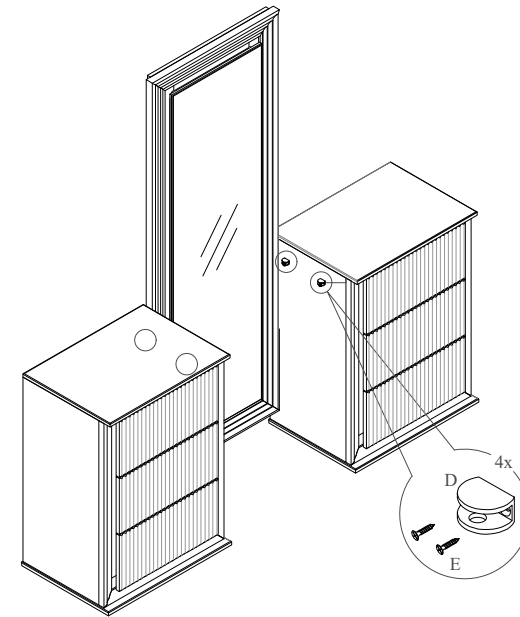

Step : 4

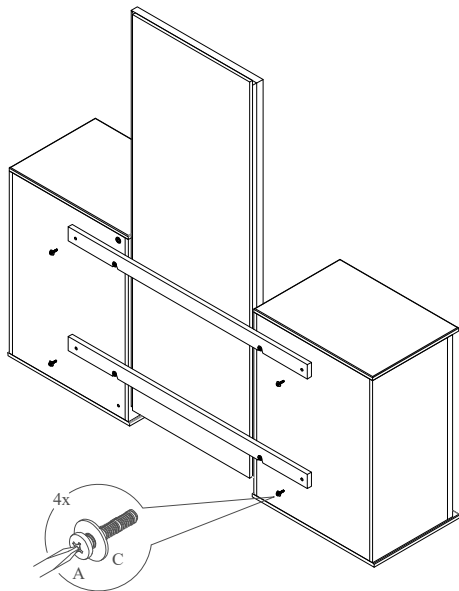

Step : 6

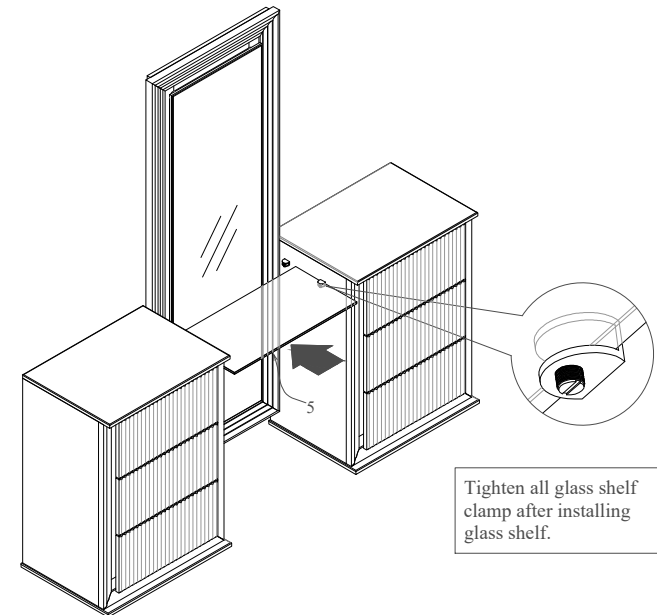

BACK VIEW
VANITY DRESSER 196

