

MODEL: CYPRESS-DARK GREY-DR + CYPRESS-DARK GREY-MR

REVISION: A

Component List			
No	Description	Qty	
A	Mirror	1	
В	Dresser	1	
С	Mirror Support	2	
D	Dresser Support	1	

Hardware List				
No	Description		Qty	
1	JCBC M6 x 40mm		8	
2	Spring Washer Ø1/4 "	6	8	
3	Flat Washer Ø1/4" x 20mm	0	8	
4	L Key M4		1	
5	CSK M4 x 32mm	-cannunc	2	

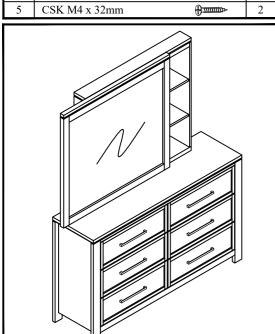


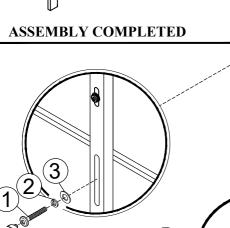

 $(\mathbf{D}$

STEP 1

Attach Mirror Support (C) to the Mirror (A) back, then tighten with JCBC M6 x 40mm (1), Spring Washer Ø 1/4" (2), Flat Washer Ø 1/4" x 20mm (3) and fully tighten with L Key M4 (4).

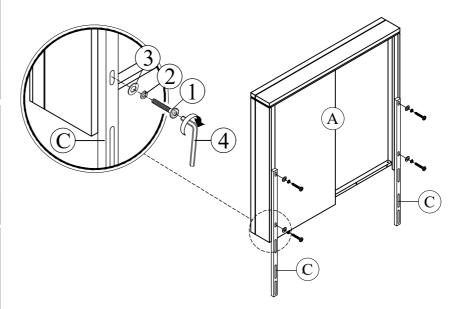

STEP 2

Place the mirror with support on the top of dresser (B). Then align center as shown and tighten with JCBC screw (1), Spring Washer (2), Flat Washer (3). Tighten using L Key M4 (4).

