


ASSEMBLY INSTRUCTION


Model : POMPEI - METALLIC GREY / WHITE / BLACK
- MR & DR / DR W / CHROME KNOB

Description : MIRROR & DRESSER /
DRESSER WITH CHROME KNOB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

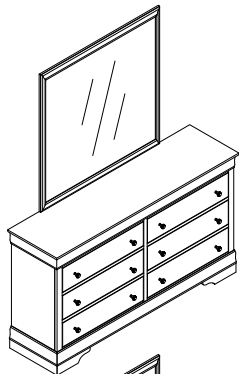

COMPLETED
MIRROR & DRESSER
ASSEMBLY

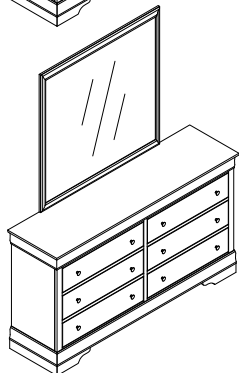

COMPLETED
MIRROR & DRESSER
W / CHROME KNOB
ASSEMBLY


PART LIST :

| No. | Description | Diagram | Quantity |
|-----|---|---------|----------|
| A | MIRROR | | 1 |
| B | DRESSER / DRESSER W / CHROME KNOB | | 1 |
| C | MIRROR SUPPORT | | 2 |

HARDWARE LIST :

| No. | Description | Diagram | Size | Quantity |
|-----|---------------------|---------|-----------|----------|
| D | CB SCREW | | M4 x 32mm | 8 |
| E | SCREW DRIVER (*) | | | 1 |

(*) The manufacturer does not provide item E.

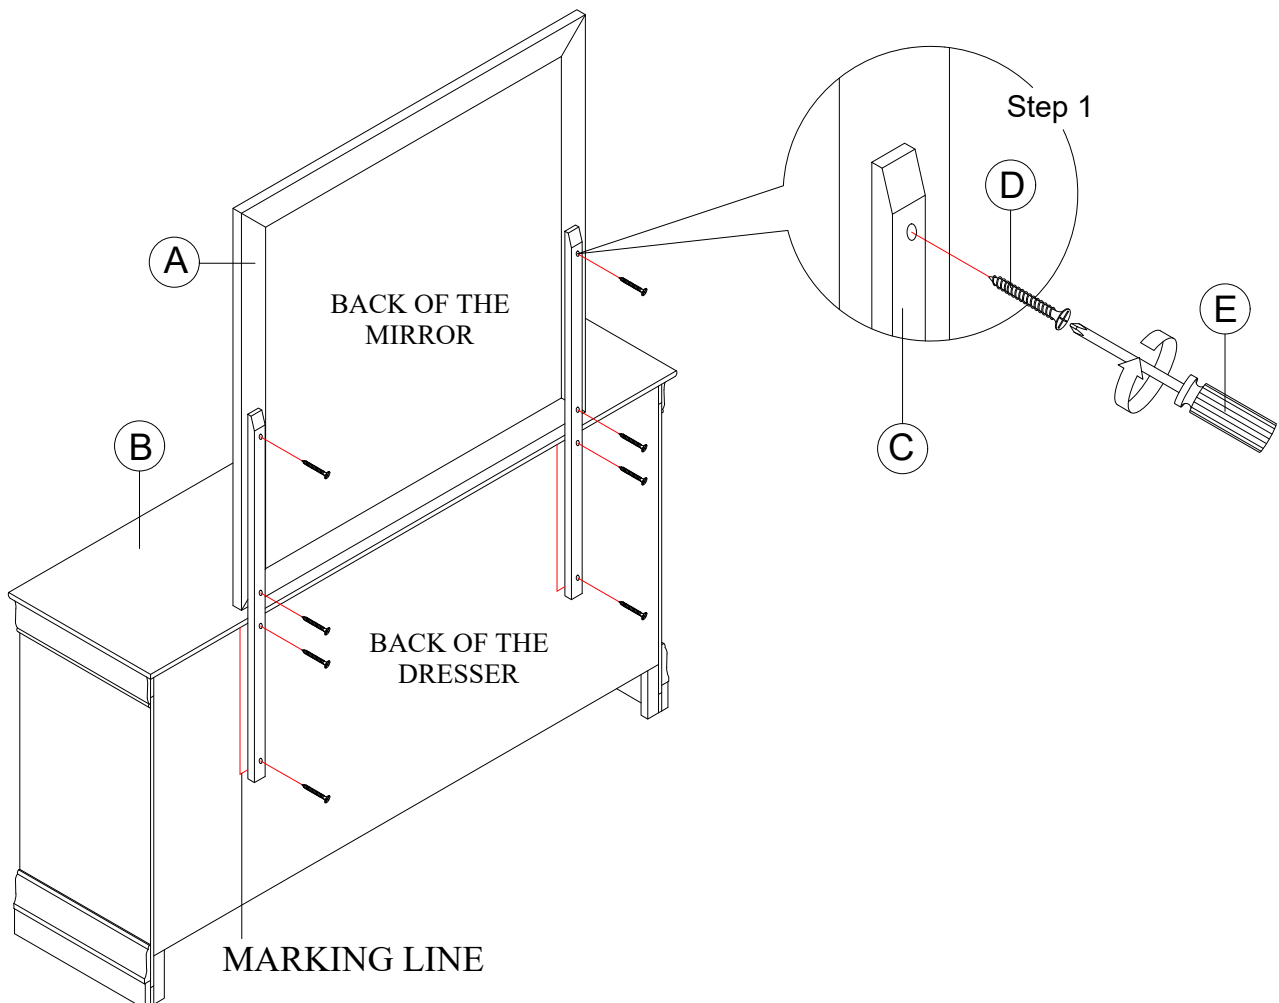

Made In Malaysia

1202 & 1827 MGR / MW / MB GLO
MIRROR & DRESSER / DRESSER W / CHROME KNOB