




1146 Farmhouse Lane, San Luis Obispo, CA 93401 USA
 1-805-528-6321 | 1-888-777-5557
 www.ReallyRightStuff.com

BP-CS MULTI-CAMERA PLATE

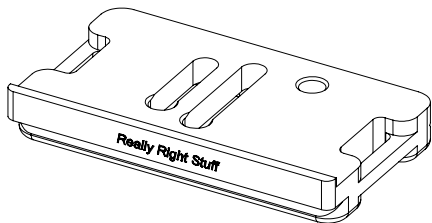

SPECIFICATIONS:


Weight2.0 ounces / 69g
 Material 6061-T6 anodized aluminum
 Dimensions.....2.7" x 1.6" / 69mm x 41mm
 Comes with one each B107 ¼"-20 mounting screw, cap head M3-0.5 x 5 safety stop screw, 5/32" hex key, M2.5 hex key.

TOP VIEW

Multiple mounting slots assure plate will fit a wide variety of camera bodies.



Screws & tools included.

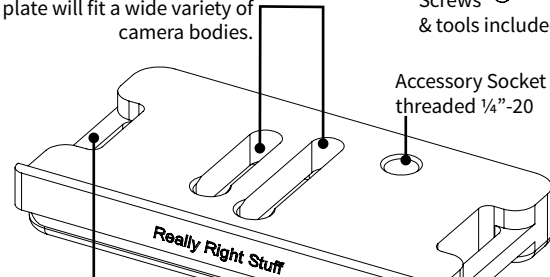


Accessory Socket threaded ¼"-20

Dual Strap Bosses allows use of handstrap in both plate mounting orientations.

Anti-Twist Flange assures plate won't twist or pivot in use.

BOTTOM VIEW:

Mount safety stop screw at either end; see installation instructions for more details.

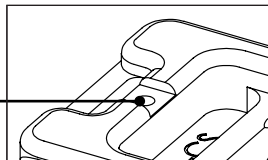

MAINTENANCE

General Care

Before installing plate, wipe off bottom of camera to prevent trapping dirt or grit. When installing mounting screw, note that mounting slots are threaded at only one end. Install screw first at the threaded end, then it will slide easily in the slot for final positioning. Periodically check mounting screw to make sure it is tightly installed.

Cleaning

Periodically wipe plate and quick-release clamp clean with a dry cloth to remove any contamination.

GUARANTEE

ALL REALLY RIGHT STUFF BRAND PRODUCTS ARE GUARANTEED TO THE ORIGINAL PURCHASER TO BE FREE OF DEFECTS IN MATERIALS OR WORKMANSHIP FOR FIVE (5) YEARS FROM THE DATE OF PURCHASE. PRODUCTS WILL BE REPAIRED OR REPLACED AT OUR OPTION.

INSTALLATION STEPS

1 Orient the Anti-Twist Flange

The BP-CS has an anti-twist flange, or ridge that snugs up against your camera body to prevent twisting and provide a secure metal-to-metal grip.

Installation: The plate may be installed with the flange against the front or back of the camera. Determine which side of the camera provides the most optimum fit. Align the flange against the edge of the camera that is flatter and allows the most contact.

2 Install Mounting Screw



Determine which of the two mounting slots provides the best clearance for the battery door or other ports.

Installation: Use the hex key to loosely install the screw from beneath the plate into the threaded end of the slot and into the camera's tripod socket. Adjust the plate so the flange is snug against the edge of the camera, then fully tighten the screw.

3 Install Safety Stop Screw



The safety stop screw will act as a stopper to prevent the plate from slipping through the clamp if the clamp is not fully closed. This prevents free fall when the tripod head is flopped into the drop notch for vertical format.

Installation: Using the hex key, install the screw into the right side of the plate—the side that will be on top when the camera is flopped vertically in the drop notch.


4 Strap Boss

The BP-CS is equipped with two strap bosses to attach your camera hand strap or neck strap.

MOUNTING PLATE IN CLAMP

Lever Release Clamp

If you have a Really Right Stuff lever-release clamp, swing the lever fully open and top load the plate.

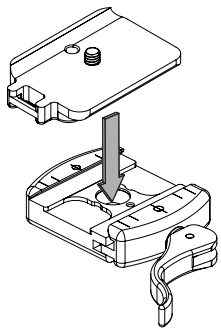

Screw Knob Clamp

If you have a screw-knob clamp, you may top load or side load the plate. Side loading is faster; just turn the knob ½ a turn and the clamp is loose enough to release the plate.

